



Teleconnect

by Budget Telecom

ANGLOPACK

Quick Setup Guide



Sagem F@st 3102 modem

Required configuration

- A standard line: non-shared analog (*excluding "Numeris" and switchboard*)
- A subscription to the ADSL service AngloPack from Teleconnect
- A standard telephone (*optional*)
- A computer with the following characteristics:
 - PC running Windows 98SE, 2000, Me, XP, Vista, Seven
 - Memory: 512 MB minimum, 1 GB recommended
 - An Ethernet port (*preferred*)
 - Wi-Fi (*optional*)




Apple computers running Mac/OS or computers running Linux are not supported.
It works though but our technical support is not guarantee in this case

Replace the dashes with your France Telecom telephone number

ADSL Username	_____	@budget.btadsl
ADSL Password	_____	


2 In your package you will find:

1

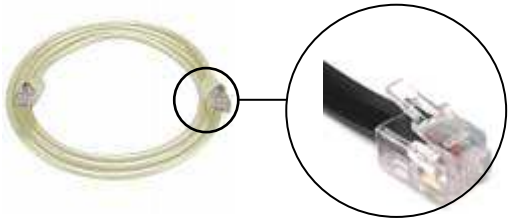

Telephone cable RJ11 X 1
Connector RJ11 male/male, Grey

2

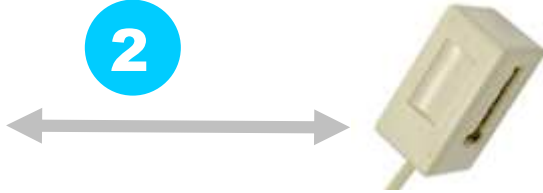

Female telephone adaptor X 1
Telephone socket adaptor / RJ11 female, Beige

3



Ethernet cable RJ45 X 1
Connector RJ45 male/male, Yellow

4



External ADSL filter X 1
Adaptor Male/femelle / RJ11 female

5




Your Wi-Fi box X 1
Sagem F@st 3102 modem/router

6



Electrical power supply and cable X 1
Transformer 220V

7

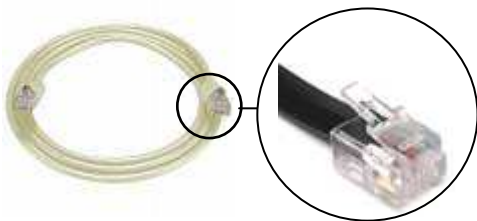

Telephone cable RJ11 X 1
Connector RJ11 male/male

3

Installation

1/ Configure your PC network

- The Internet Protocol properties must be set to the following :
 - **obtain an IP address automatically**
 - **obtain a DNS address automatically**
- To configure the network on your PC, please check your computer users' guide.

2/ Connect your equipment

- As described in the « wiring diagram » enclosed on page 4
- When the cabling is complete, the auto-configuration will launch automatically. Please be patient and do not touch anything before the light @ is green and steady and the light ⤵ is on (this should take about 5 min)

3/ Login procedure


- The login information will normally be auto-configured in your box, and you will be connected to the Internet automatically.
- However, in a few cases, your ADSL login details may be requested (particularly after a box RESET). In this case, please enter them, as stated on page 1 of this guide and follow the instructions :

Access the box configuration interface


- To do so, please open Internet Explorer (or another Web browser)
 - in the address bar, please type in : <http://192.168.1.1>
 - a login dialogue window will appear.
 - please enter the following information :


Login User Profile:	user
(no password)	

Then select: Point-to-Point Protocol over Ethernet (PPPoE)

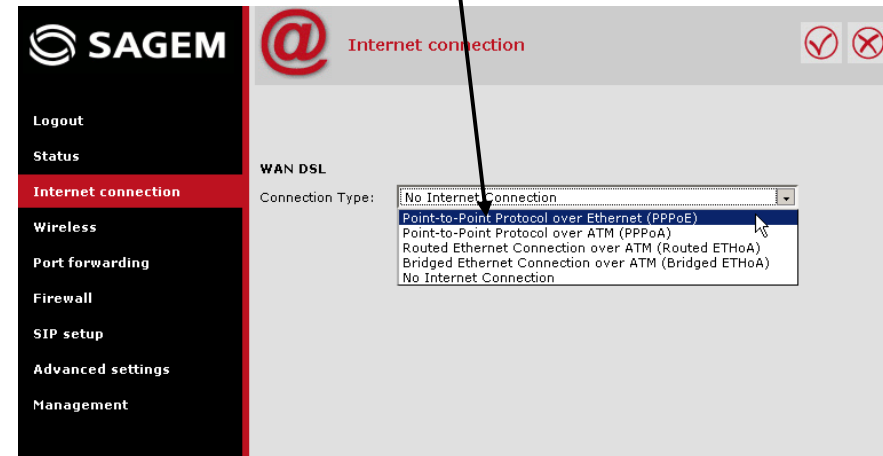


Enter then your login details as stated in page 1, in the corresponding fields (User Name & Password):

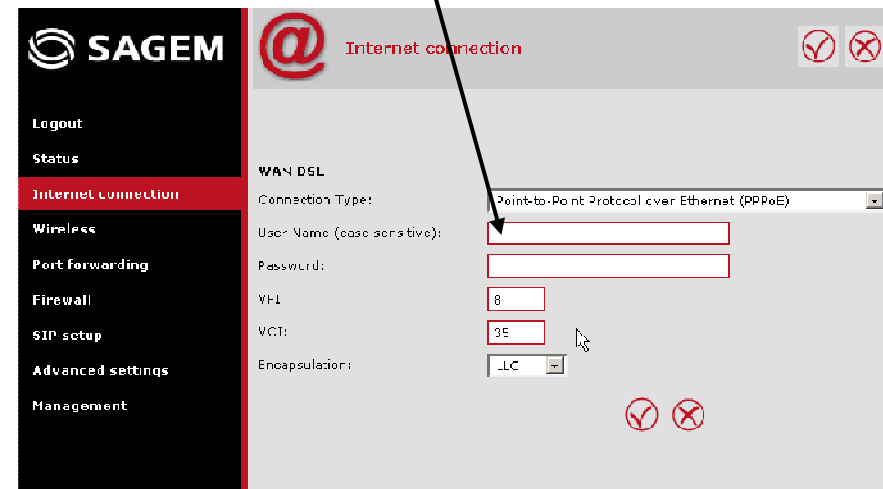

Note: VPI must have a value of 8 and VCI must have a value of 35.
Validate by clicking on 

Wiring Diagram

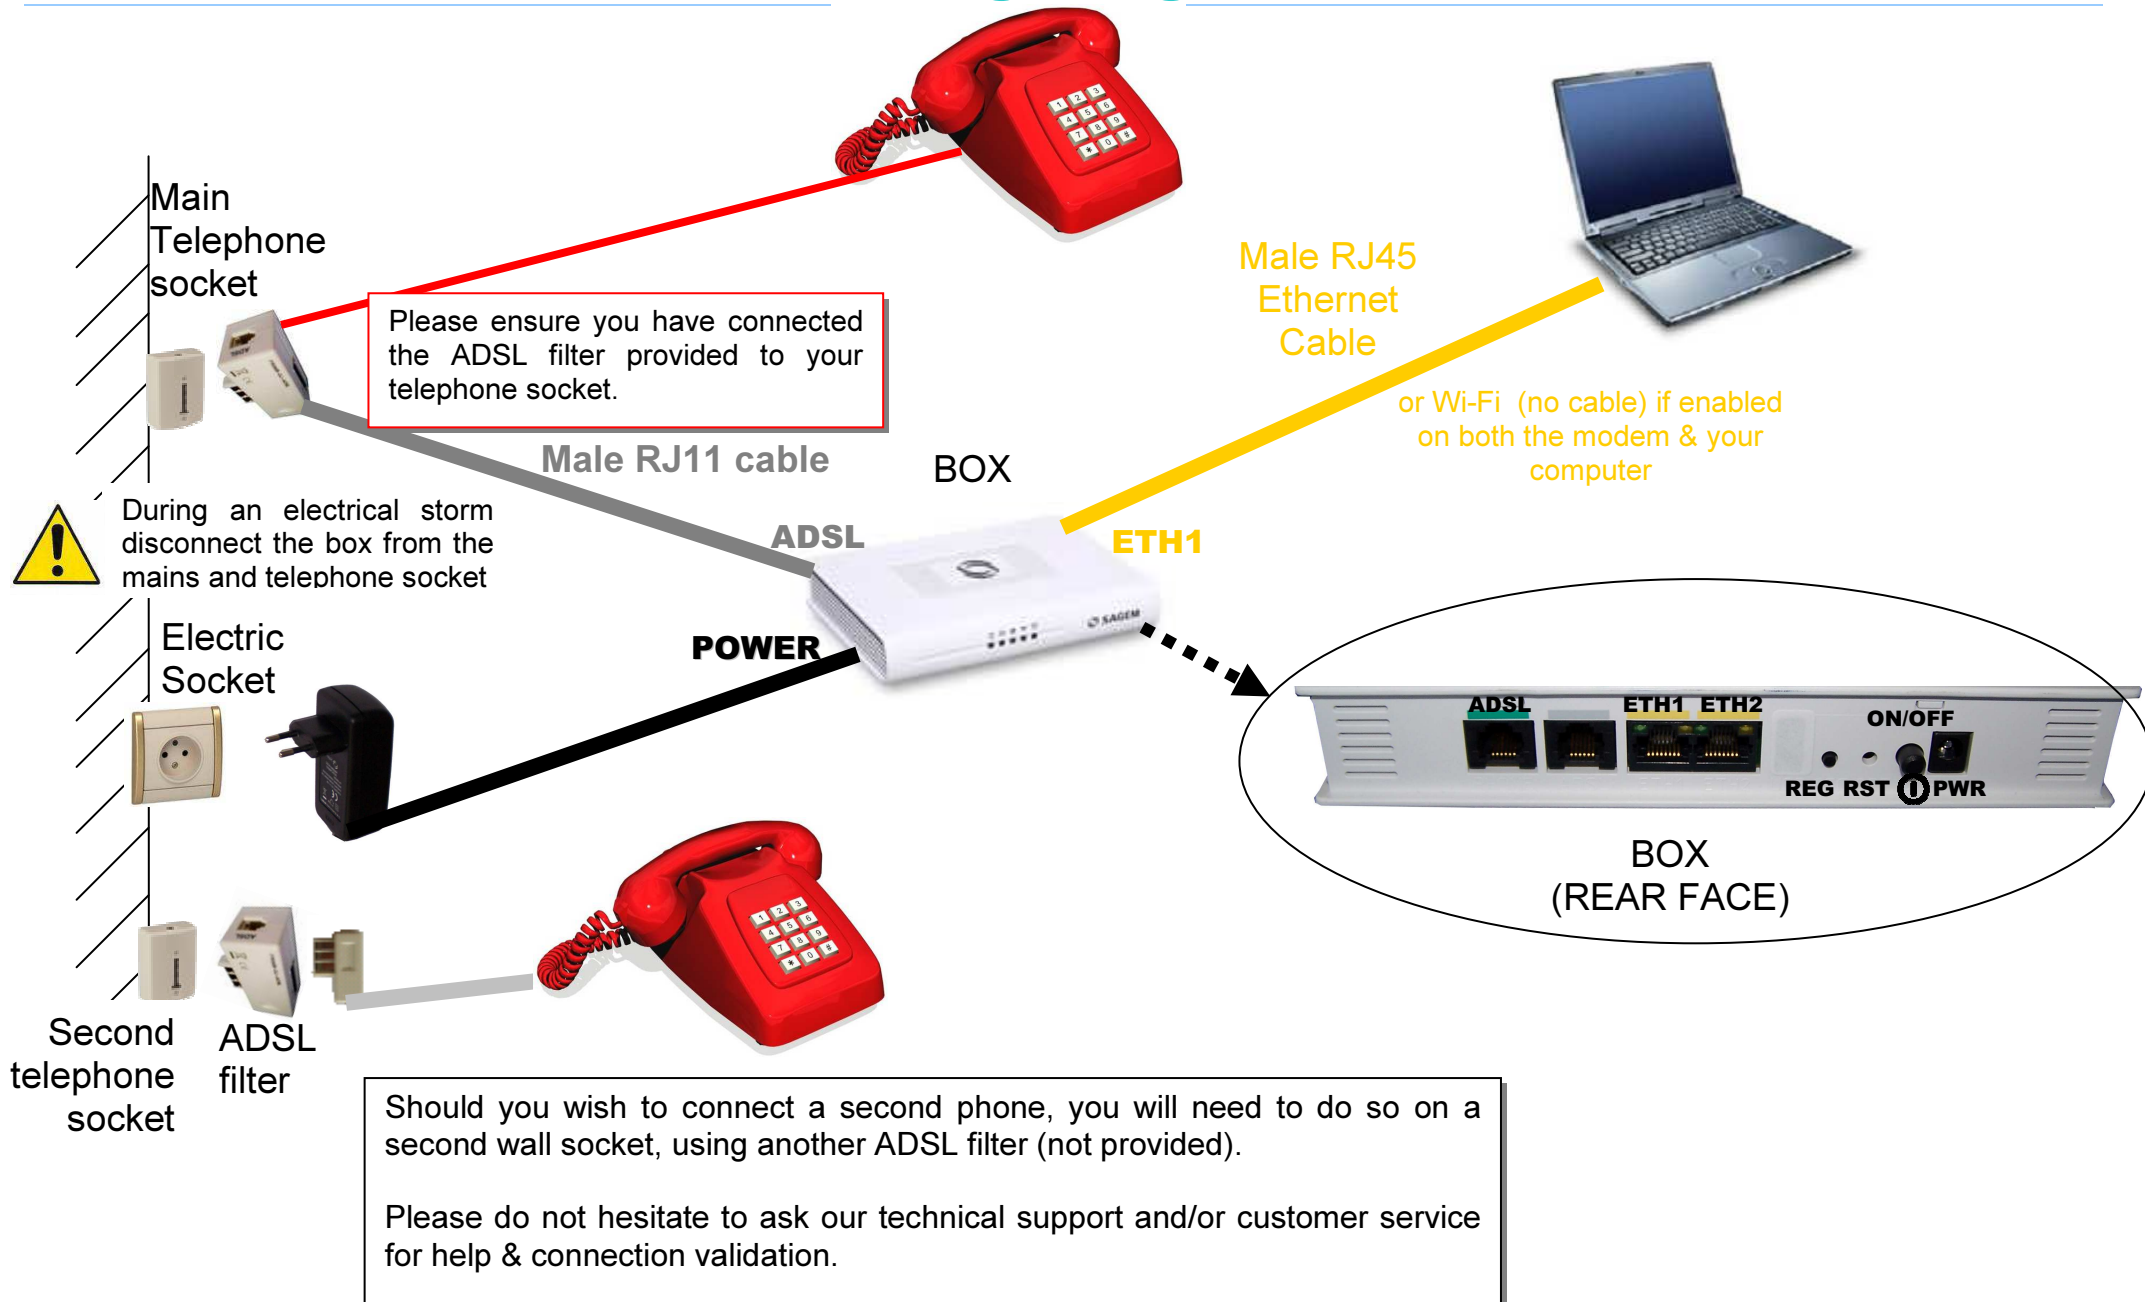

5

Wi-Fi configuration (optional)


For your convenience, the Wi-Fi interface of your box is enabled by default. However, you may choose to enable/disable it. To enable/disable Wi-Fi, please follow the instructions here below:

1/ Access the box configuration interface:

- To do so, please open Internet Explorer (or any similar Web browser)
 - in the address bar, please type in : <http://192.168.1.1>
 - a login dialogue box will appear.
 - please enter the following information :


Login User Profile:	user
(no password)	

2/ Enable/disable Wi-Fi

- In the interface, please click on “wireless network”, in the left hand side menu. Then click on ” SSID1”, select the status “Enabled” or “Disabled” on the drop down menu.
- Validate by clicking on 

3/ Follow the Wi-Fi instructions of your PC

- You will also need to configure the Wi-Fi device of your computer. As these devices are different on each computer, we advise you to refer to your computer user guide or to contact the technical assistance of its manufacturer should you have any doubt.
- Please connect to the wireless network named "FAST3102 - xxxxxx" (where xxxxxx is an alphanumeric reference particular to each box)
- During this process, you will be asked for a WPA encryption key. This key is printed underneath your router. Please type in this key carefully in uppercase without any dots or spaces.

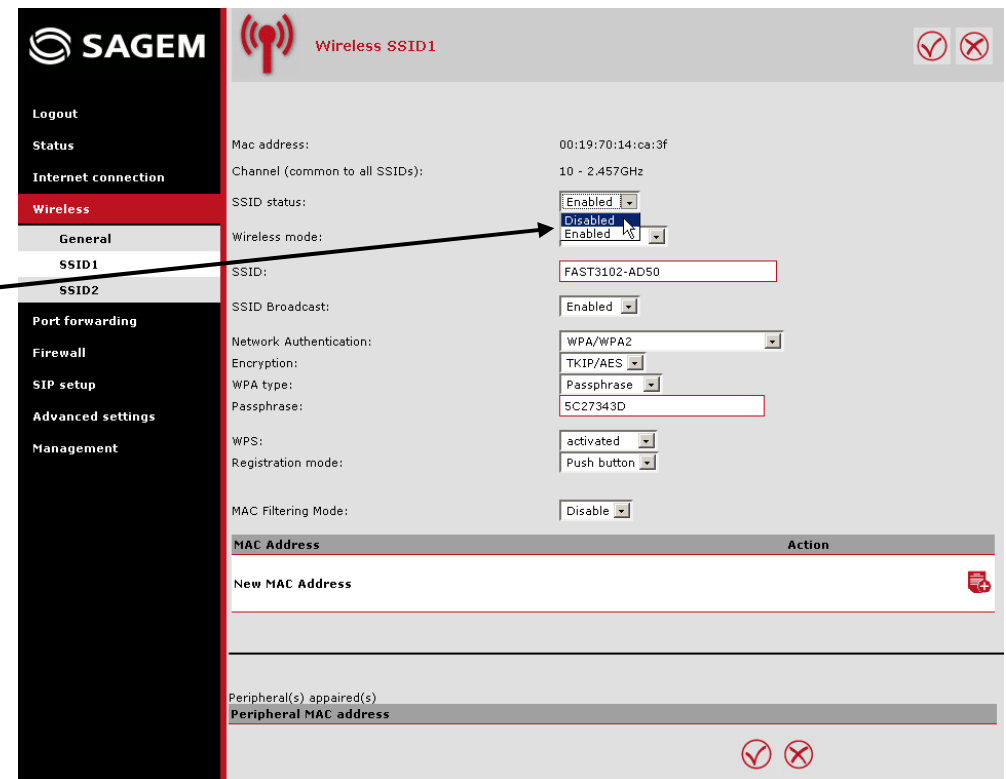

The screenshot shows the Sagem router configuration interface. The left sidebar contains a navigation menu with options: Logout, Status, Internet connection, **Wireless**, General, SSID1, SSID2, Port forwarding, Firewall, SIP setup, Advanced settings, and Management. The main content area is titled "Wireless SSID1" and displays various configuration options. The "Wireless mode" dropdown menu is open, showing "Enabled" and "Disabled" options. An arrow points from the text in step 2 to the "Enabled" option. Other settings include: Mac address: 00:19:70:14:ca:3f, Channel (common to all SSIDs): 10 - 2.457GHz, SSID status: Enabled, SSID: FAST3102-AD50, SSID Broadcast: Enabled, Network Authentication: WPA/WPA2, Encryption: TKIP/AES, WPA type: Passphrase, Passphrase: 5C27343D, WPS: activated, Registration mode: Push button, and MAC Filtering Mode: Disable. At the bottom, there is a section for "MAC Address" with a "New MAC Address" input field and a "Peripheral(s) appeared(s)" section for "Peripheral MAC address".

6

What to do if a problem arises?

Event	Test procedure or possible cause
The Power light is off	Please check that the power supply block is properly plugged in. Check that the power supply cable is properly connected to your router. Check that the electrical socket is in working order by plugging a different device into. Check your fuse box and your central electricity supply.
I can't connect to the Internet in Ethernet mode	Please check that the Ethernet cable is properly connected to your computer and to your box. Check that your computer is properly configured to enable Internet access (network configuration menu).
I can't configure my Modem in Wi-Fi mode	By default the Wi-Fi is active. However, it may have been deactivated for some reason. In this case, you need to activate it again through the box interface.
I can't connect in Wi-Fi mode	Please check that the encryption WPA key has been entered as it is written underneath the box respecting uppercase and without any spaces.
Wi-Fi is configured properly but I still can't connect in Wi-Fi mode	Please check that the box is in working order (lights on), that your computer's Wi-Fi adaptor is set to WPA encoding and TKIP/AES encryption and that you have properly entered the WPA key as stated underneath your box. You can also try to move your computer closer to the box. If Wi-Fi does not work in your house, please check our powerline solution on www.budget-boutique.com
I can't connect several computers to the box	Please check that each new computer is connected properly to the box (by Ethernet or Wi-Fi) and that the method used is correctly configured on each computer.
I can't surf on the Internet	Please reboot the box using the ON/Off switch at the back of the box.
My internet pages "freeze"	Reboot the box using the ON/Off switch at the back of the box.
When I pick up the telephone, I hear a loud buzz	You probably have not placed an ADSL filter on your main or secondary telephone wall socket.

FREE Technical Support Hotline

open Monday- Friday 9am-5pm

by phone: 0805 111 555 (free call)

or by e-mail: support@teleconnect.fr

For non-technical issues: 0805 02 4000 (free call)